



One Touch Alert User Manual


1. ONE TOUCH ALERT SET UP

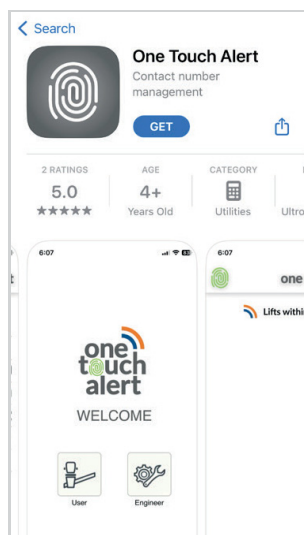

- 1 Download the **One Touch Alert** application from the app store.
- 2 Allow Bluetooth permissions if prompted.
- 3 Set preferred language.

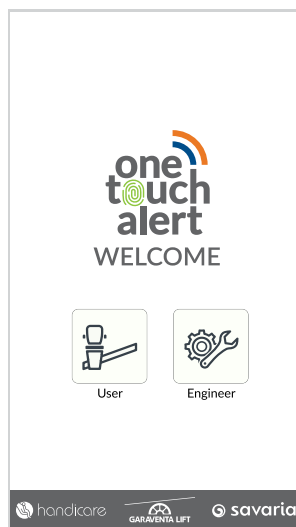

- 4 Select **User**

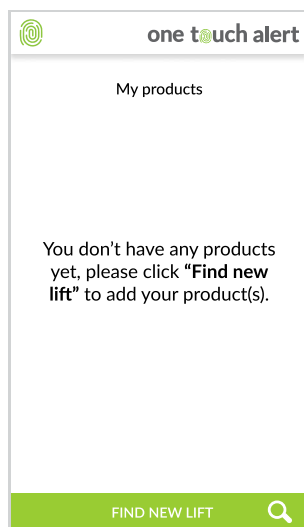

- 5 Click the **Find New Lift** button at the bottom of the screen.




- 6 Once found, the lift will show up as **Savaria VLink_xyz**. Connect to the lift by pressing the + button.


NOTICE



Savaria VLink_xyz, is an example. Your device will display its own unique identifier.

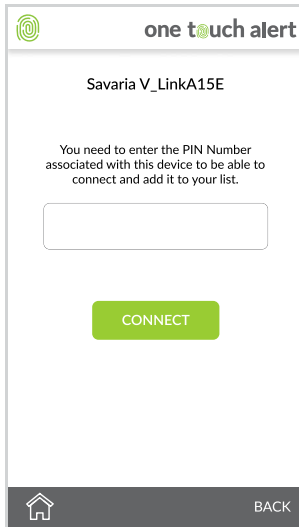


- 7 Enter the pin **112233** to register the lift and click connect.

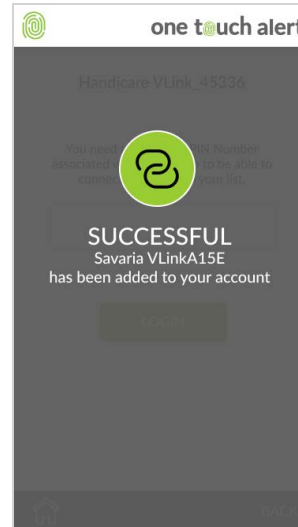


- 8 A confirmation screen will appear indicating the lift has been successfully linked.

Editing Details

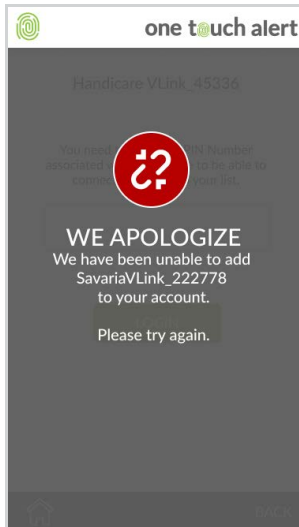

- 9 If the link process is not successful, the following screen will appear. Ensure the device is still powered on and bluetooth connection is available before attempting to reconnect again.

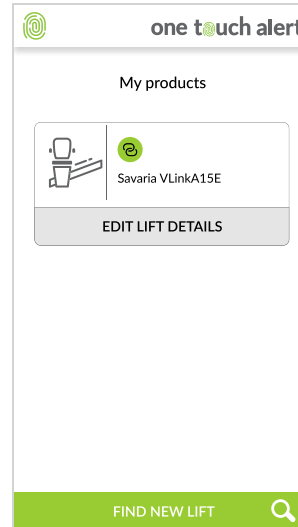

Account Details

Your account name and language preferences are available when you select the fingerprint icon at the top left.

Lift Details

- 1 Under **My Products**, the registered device and connection status will appear.
- 2 Click **Edit Lift Details** under the specific product you wish to edit.

one touch alert

Change User Contact Details

Name

Phone

CONFIRM

BACK

- 3 Select the option **Change User Contact Details**.
- 4 Add the information according to your preferences.
- 5 Press **confirm** to save the changes made.

NOTICE

It's recommended to add at least **three contacts**.

one touch alert

Handicare V_Link45336

Lift Name

Lift PIN Number

SIM Information

User Contact Details

Volume

DISCONNECT THIS LIFT

REMOVE THIS LIFT

BACK

- 6 Additional lift setting can be modified, if needed:
 - Lift Name
 - Lift Pin
 - Sim Information
 - Volume
 - Microphone Sensitivity

2. USING ONE TOUCH ALERT



Placing/Ending Call:

- 1 Press and hold the One Touch Alert button for **three seconds**, then release.
- 2 When the call is **ringing**, the button will **blink**.
- 3 When the call has **connected**, the button will remain **solid**.
- 4 To terminate the current call, press and hold the call button for **three seconds**.

If the Call is Unanswered:

- One Touch will automatically dial the next programmed number.

If the Call Goes to Voicemail:

- Press and hold the call button for **three seconds** to end the call.
- To dial the next programmed number, press and hold the call button for **three seconds** again.

3. OTA SHOWCASE



Home Elevator



Vuelift



V-1504



Luma